



# VIPER LVT CLEANER

## LVT Surface Prep and Maintenance Cleaner

### LVT CLEANER

Viper LVT Cleaner is designed specifically for use on luxury vinyl tile (LVT) and other flexible vinyl flooring. Viper LVT Cleaner works exceptionally well as a maintenance cleaner, or as a restorative cleaner when run through micro scrubbers as part of an extraction cleaning process. When used correctly, Viper LVT Cleaner is an ideal surface preparation product for use prior to application of LVT coatings.



Part Number: 2657-4160 | RTU ph - 7.5 | Contents: One U.S. Gallon (3.79 Litres) | Available in Gallons and 4 x 1 gallon cases

### DIRECTIONS

#### For Maintenance Cleaning:

- Mix 1 part Viper LVT Cleaner to 32 parts water in a quality pump or electric sprayer.
- Spray a light coat of solution onto area to be cleaned and dampen a fitted pad attached to applicator handle. Work in small, controlled sections.
- Agitate the solution with overlapping strokes to loosen dirt.
- Mop the floor with a clean fitted pad to remove additional soil - this will provide a fresh clean look to the surface.

#### For Extraction Cleaning:

- Mix 1 part Viper LVT Cleaner with 4 parts warm water in micro scrubber cleaning machine.
- Maneuver micro scrubber in back and forth motion with solution pump, vacuum(s) and agitation brush in the on position. Move at moderate speed in smooth overlapping strokes. Repeat as necessary in heavily soiled areas.
- Remove any standing solution with an absorbent flat mop.
- If excess foam is present from previous / poor maintenance procedures, consider a final clear water rinse to further reduce remaining residue.

- Allow surface to dry before use.

#### For Surface Prep:

NOTE: If applying Viper LVT Coating, follow procedures outlined on LVT Coating Label prior to application.

Consider an application of Viper LVT Coating to maintain optimum performance of LVT Flooring.

